



## UPDATE PROCEDURE LD 520 DETECTOR



1. Download the LD 520 update on your computer :

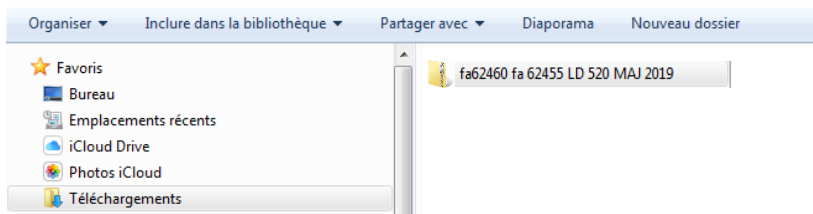


2. Right-click on the compressed folder and choose from the "Extract All" menu and click "OK":

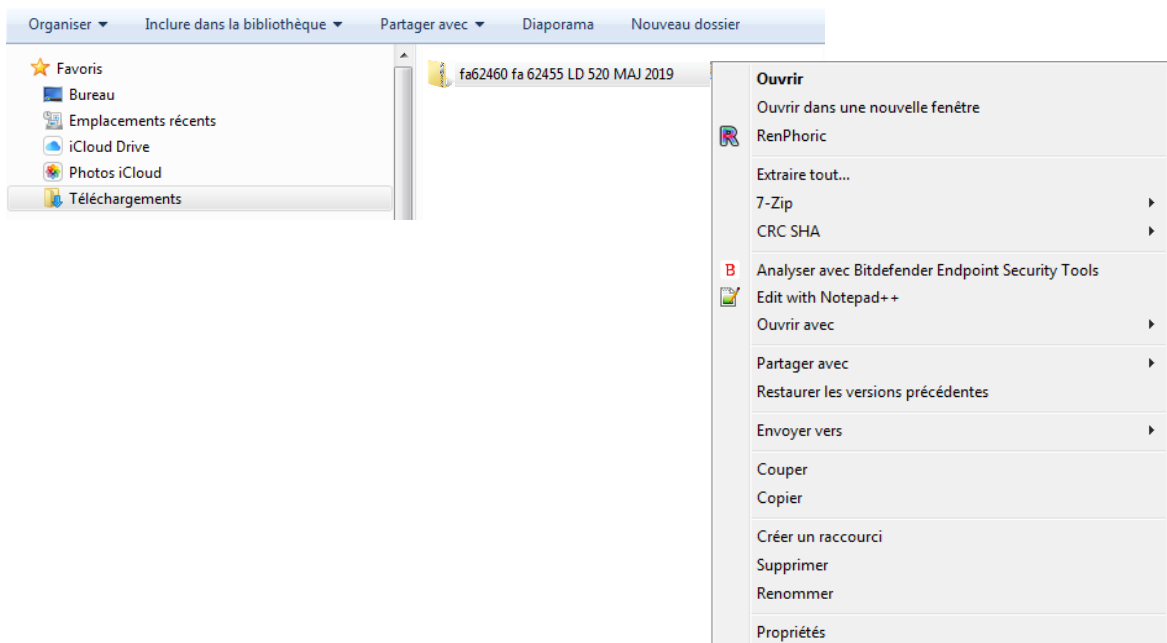

3. Double-click on the "CH341SER" application

Nom	Modifié le	Type	Taille
NX100WinUpgrade_V175_USD_EUR_GBP	07/11/2019 14:34	Dossier de fichiers	
CH341SER	08/03/2019 10:50	Application	Dossier de fichiers Application


4. Click on "Install"

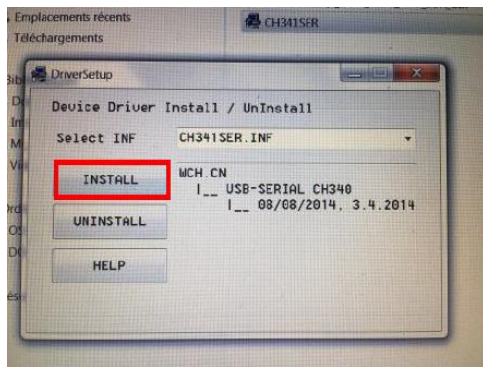

5. When the application is installed, click "OK"



6. Set the device to "receive" mode by simultaneously pressing the button on the front of the device (1) and the power button on the back of the device. (2).

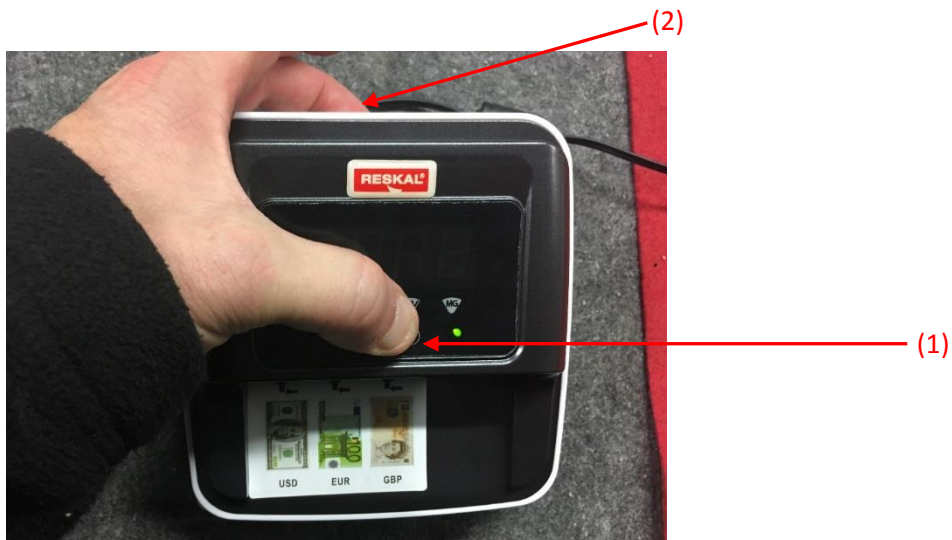


7. The green LED on the right (3) lights up to confirm that the unit is in "receive" mode.




8. Connect your LD 520 detector to your computer using the cord provided for this purpose:






9. Open the folder « NX100WinUpgrade\_V175\_USD\_EUR\_GBP »

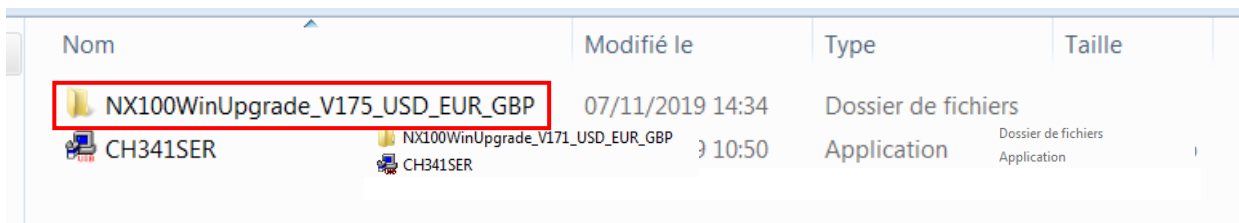


10. Double-click on the application « NX100WinUpgrade\_V175\_USD\_EUR\_GBP »

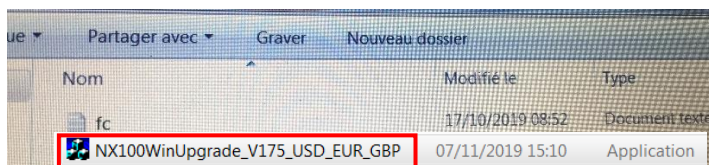

11. Click on "Upgrade". The update starts and progresses

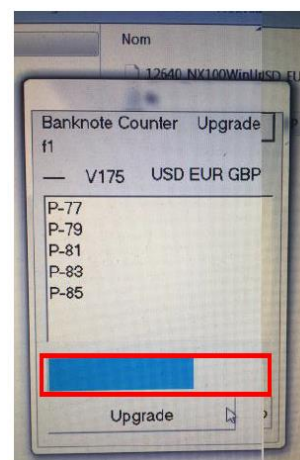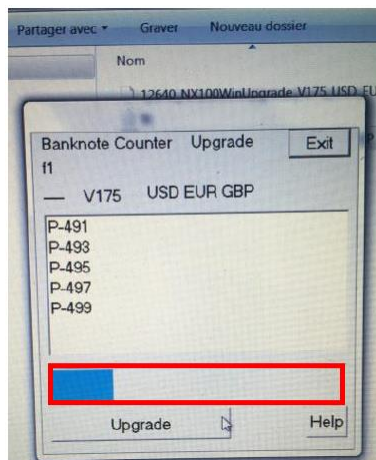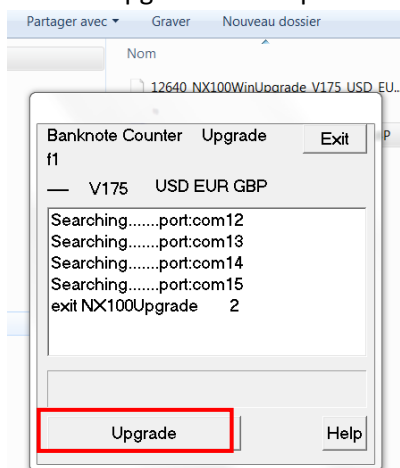


12. When the update is complete, click "Exit"

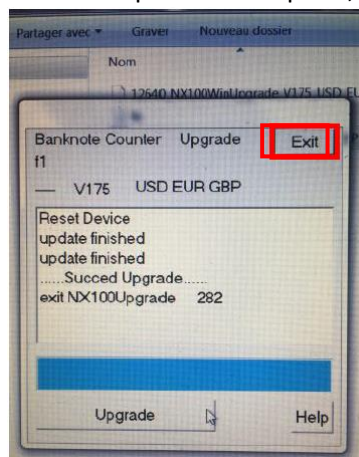

13. Check the update, when turning on the device the following code appears :

- Old program version screen :

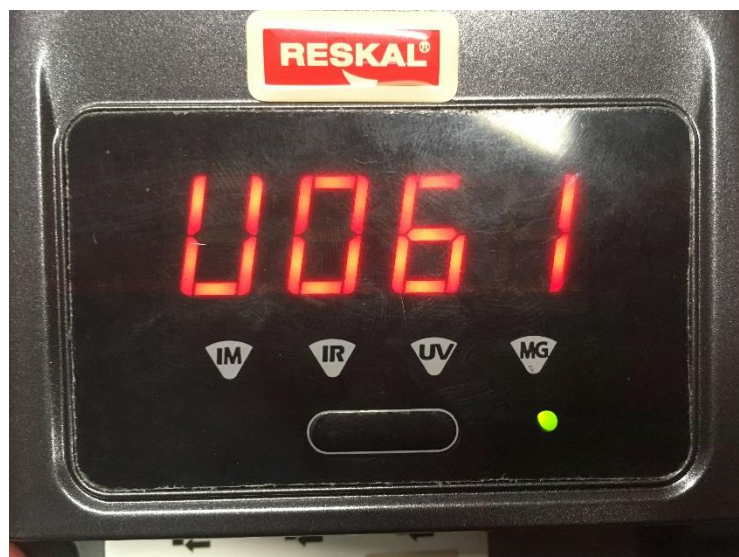

- New program version screen:



In case of difficulties, contact our After-Sales Service:

**RESKAL®**

**Service Après-Vente**  
*After-sales Department*

Tél. : (33) 4 73 51 78 20  
(33) 4 73 51 78 15

Fax : (33) 4 73 51 44 35

**sav@reskal.com**

**Horaires d'ouverture :** du lundi au vendredi de 8 h à 12 h  
et de 13h30 à 17h15 (vendredi 16h30)

**Opening hours:** from Monday to Friday 8 am to 12 am  
and 1:30 pm to 5:15 pm (Friday 4:30 pm)

**Adresse :** SAV RESKAL c/o SAFETOOL  
**Address:** ZI CHEZ COTTE  
63650 LA MONNERIE- LE MONTEL (FRANCE)